

MAGNEHELIC GAUGE CONTROL INSTRUCTIONS



Prior to spraying, Technicians must set the Magnehelic Gauge to NEGATIVE Pressure between -0 and -10PA using the balance controls illustrated above.

In the event of POSITIVE Pressure occurring within the booths an audible and visible alarm will activate; in these instances spraying must cease IMMEDIATELY.